

Mode Buttons & Functions

1(White Stars) 2 (Advanced) 3 (RGB Stars) 4 (Mini Lights) 5 (Stars with a Shooting Star) 6 (Epic 4 Stars)

* When the command is programmed, the corresponding BUTTON will FLASH 10 times. *

To change Switch Mode: Hold a button while powering up.

BUTTON		MODE 1 - Controlling Epic Stars	
		SHORT PRESS <1 Second	LONG PRESS <2 Second
1		Stars on solid 100%	Stars on solid 100%
2		Stars off	Stars off
3		Tropical Winds - Fast Sparkle	Tropical Winds - Fast Sparkle
4		Night Sky - 3D Perspective	Night Sky - 3D Perspective
5		Sleep Mode - Stars turn off in 60 min. Button LED will pulse	Sleep Mode - Stars turn off in 60 min. Button LED will pulse
6		Rain Shower	Rain Shower
BUTTON		MODE 2 - Controlling Epic Advanced	
		SHORT PRESS <1 Second	LONG PRESS <2 Second
1		Solid color select	Reset solid color to color 1 - Warm White
2		RGB Dim - All RGB channels dim 4%	Pauses color cycle
3		Recall solid color preset A	Save solid color preset A
4		Recall solid color preset B	Save solid color preset B
5		Show select	Reset show to show 1 - Color Cycle
6		All LED Channels off	Sleep Mode - Will turn off LEDs in 60 min. Button LED will pulse
BUTTON		MODE 3 - Controlling Epic RGB Stars	
		SHORT PRESS <1 Second	LONG PRESS <2 Second
1		Kaleidoscope	Party Mode
2		Chroma Sweep	Iridescent White
3		Dim by 10%	Dim directly to 10%
4		Brighten by 10%	Brighten directly to 100%
5		Solid Color Sparkle Select	Go to color 1 sparkle (blue)
6		RGB Stars off	Sleep Mode - Will turn off LEDs in 60 min. Button LED will pulse
BUTTON		MODE 4 - Controlling Epic Mini Lights	
		SHORT PRESS <1 Second	LONG PRESS <2 Second
1		Sets Both Channels to 100%	Sets Both Channels to 100%
2		Sets Both Channels to 75%	Sets Both Channels to 75%
3		Sets Both Channels to 50%	Sets Both Channels to 50%
4		Sets Both Channels to 25%	Sets Both Channels to 25%
5		Sets Both Channels to 10%	Sets Both Channels to 10%
6		Turns Both channels off	Turns Both channels off




BUTTON		MODE 5 - Controlling Epic Stars and a Shooting Star	
		SHORT PRESS <1 Second	LONG PRESS <2 Second
1		Night Sky - 3D Perspective	Night Sky - 3D Perspective
2		Rain Shower	Rain Shower
3		Party Mode	Party Mode
4		Stars on solid 100%	Stars on solid 25%
5		Shooting Star every 10 seconds	Shooting Star every 60 seconds
6		Global Off	Sleep Mode - Will turn off Stars in 60 min. Button LED will pulse
BUTTON		MODE 6 - Controlling Epic 4 Stars and a Shooting Star	
		SHORT PRESS <1 Second	LONG PRESS <2 Second
1		Night Sky - 3D Perspective	Night Sky - 3D Perspective
2		Rain Shower	Rain Shower
3		Party Mode	Party Mode
4		Stars on solid 100%	Stars on solid 25%
5		Shooting Star every 10 seconds	Shooting Star every 60 seconds
6		Global Off	Sleep Mode - Will turn off Stars in 60 min. Button LED will pulse

ADVANCED MODES
MODES & COLOR BUTTON FUNCTIONS

**EPIC ADVANCED
SOLID COLOR MODES**

MODE	COLOR
1	Warm White
2	White
3	Blue
4	Gold
5	Magenta
6	Light Blue
7	Violet
8	Cyan
9	Pink
10	Orange
11	Green
12	Red
13	Light Green

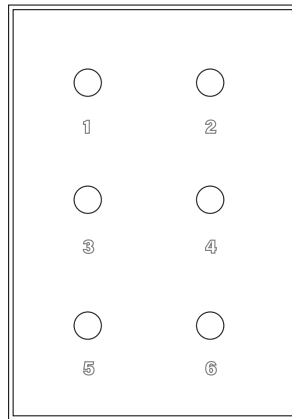

**RGB STARS
SOLID COLOR MODES**

MODE	COLOR
1	Blue
2	Cyan
3	Magenta
4	Gold
5	Green
6	Red
7	White

**EPIC ADVANCED
SHOW MODES**

MODE	COLOR
1	Color Cycle
2	Sunset
3	Tranquility
4	Morning Sky
5	Royal
6	USA
7	Twilight
8	Valentines Day
9	Easter
10	Autumn
11	Christmas
12	Cool Cabaret
13	Rainbow

